


WET SUIT / DRY

MAXIMUM STRENGTH REPAIRS

Urethane-based adhesives are the best for achieving maximum strength and durability. When your goal is a permanent bond, choose **Aquaseal® Repair Adhesive & Sealant** – it's the industry standard for high strength, absolutely permanent repairs to all kinds of dive gear including wet suits, dry suits, gloves, boots, gear bags and more. **Aquaseal** cures to full strength overnight or in 2 hours with **Cotol-240™ Cure Accelerator & Pre-Cleaner**.

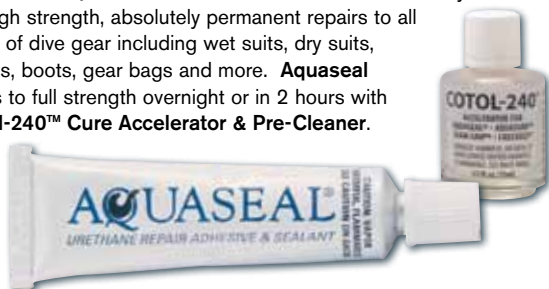

Use **Aquaseal** to seal leaky gasket seams.

STEP 1: Turn suit inside out. Clean damaged area with **Cotol-240** or isopropyl alcohol. Non-fabric surfaces such as latex should first be roughened with sandpaper, then cleaned.



STEP 2: Apply **Aquaseal** in a 1/16" high bead overlapping seam edges by at least 1/4". Use included brush to saturate fabric surfaces. Dry level overnight.

Aquaseal is also ideal for repairing holes and tears. For holes larger than a pinhole, create a backing with removable tape. Fill hole and 1/4" beyond. Remove tape after **Aquaseal** has fully cured.



Create a Knee Patch



Create an ultra-tough, flexible knee patch with **Aquaseal** to protect suits from abrasion. Simply apply a thin coat of **Aquaseal** with a disposable plastic knife. Dry level overnight.